



User Guide

AC1200 Whole Home Mesh Wi-Fi System Deco E4

Contents

About This Guide	1	WPS	22
Appearance	2	Parental Controls	23
Set Up Your Deco	3	QoS	24
Add More Decos	6	Monthly Report	25
Dashboard	7	Managers	26
Check Deco Status	8	FAQ	27
Manage Connected Devices	9	Authentication	28
Set Main Deco	10		
Create New Networks	11		
Remove/Reboot Deco	13		
Wi-Fi Settings	14		
Blacklist	15		
Online Update	16		
Advanced Features	17		

About This Guide

This guide provides a brief introduction to Deco Whole Home Mesh Wi-Fi System and the Deco app, as well as regulatory information.

Features available in Deco may vary by model and software version. Deco availability may also vary by region or ISP. All images, steps, and descriptions in this guide are only examples and may not reflect your actual Deco experience.

Conventions

In this guide, the following conventions are used:

Convention	Description
Deco	Stands for Deco Whole Home Mesh Wi-Fi System/Unit.
<u>Underline</u>	Hyperlinks are in teal and underlined. You can click to redirect to a website or a specific section.
Teal	Key information appears in teal, including management page text such as menus, items, buttons and so on.
📌 Note:	Ignoring this type of note might result in a malfunction or damage to the device.
💡 Tips:	Indicates important information that helps you make better use of your device.

More Info

- Specific product information can be found on the product page at <https://www.tp-link.com>.
- A Technical Community is provided for you to discuss our products at <https://community.tp-link.com>.
- Our Technical Support contact information can be found at the [Help](#) center of the Deco app and the [Contact Technical Support](#) page at <https://www.tp-link.com/support/>.

Speed/Coverage/Device Quantity Disclaimer

Maximum wireless transmission rates are the physical rates derived from IEEE Standard 802.11 specifications. Range, coverage, and maximum quantity of connected devices are based on test results under normal usage conditions. Actual wireless data throughput, wireless coverage, and quantity of connected devices are not guaranteed and will vary as a result of 1) environmental factors, including building materials, physical objects, and obstacles, 2) network conditions, including local interference, volume and density of traffic, product location, network complexity, and network overhead, and 3) client limitations, including rated performance, location, connection quality, and client condition.

MU-MIMO Disclaimer


Use of MU-MIMO requires clients to also support MU-MIMO.

 
Seamless Roaming Disclaimer

Clients need to support 802.11k/v/r and may require additional set up. Performance may vary depending on the client device.

Appearance

Each Deco has an LED that changes color according to its status, two RJ-45 Ethernet ports, a power slot, and a Reset button. See the explanation below:

 Tip: The product label can be found at the bottom of the product.

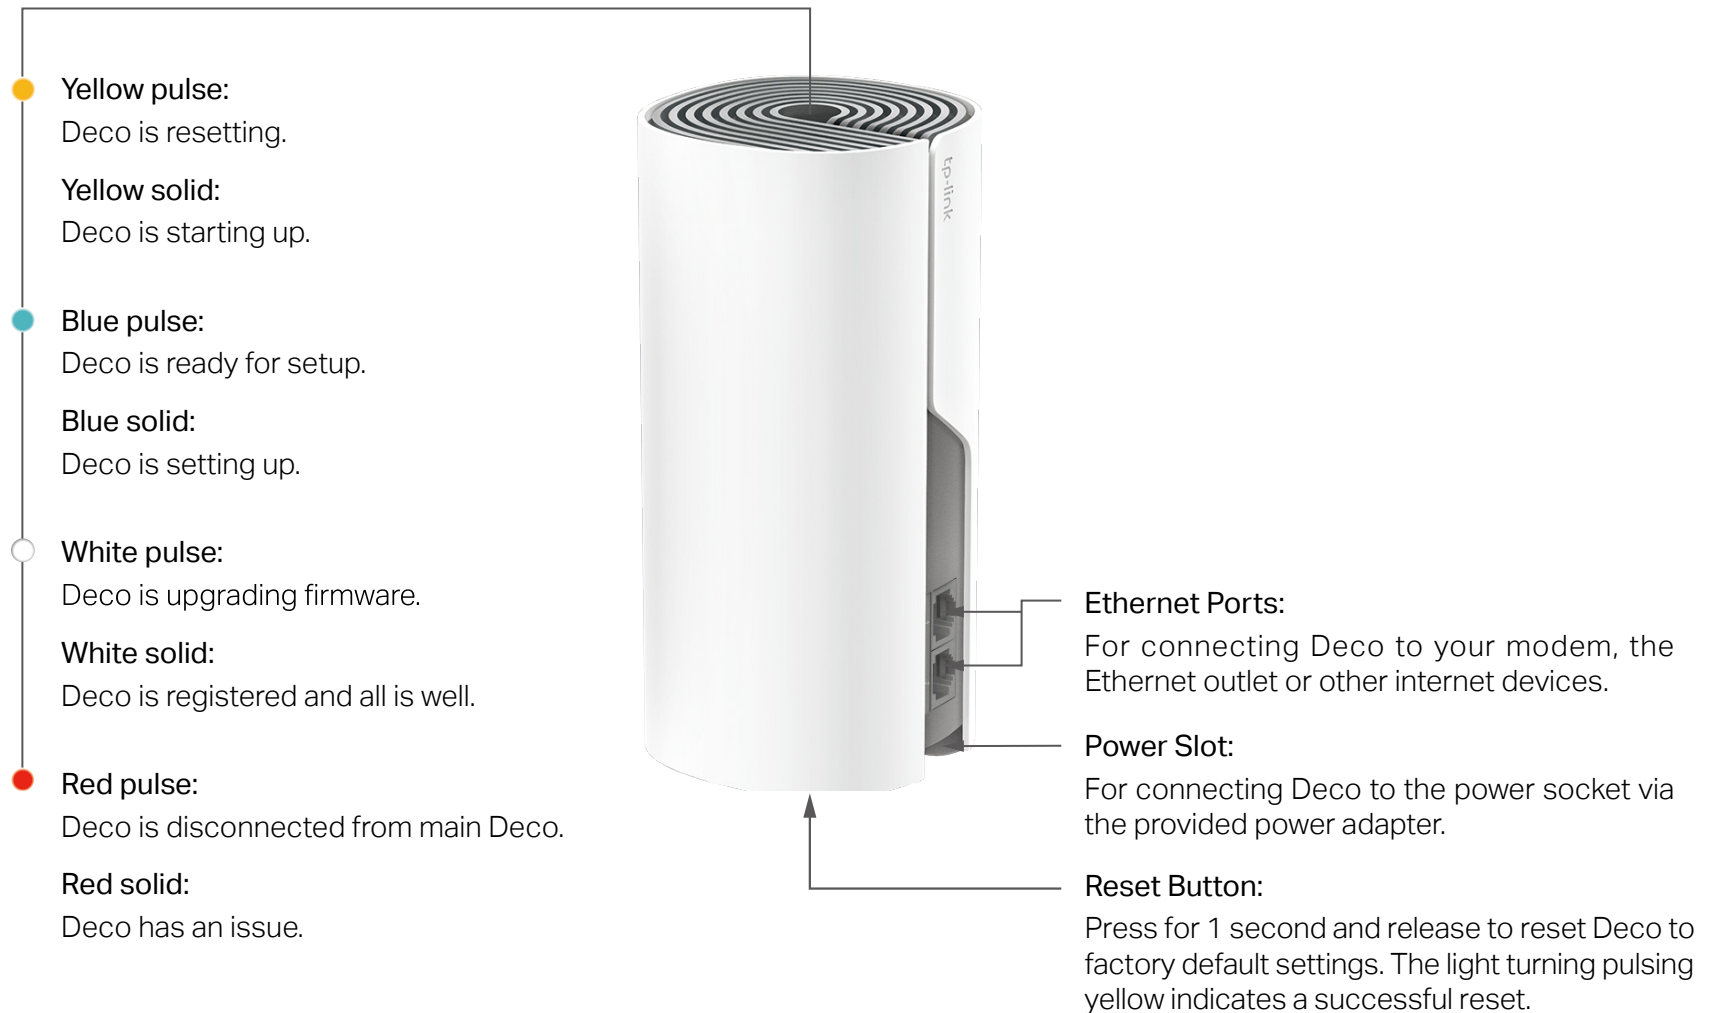

Set Up Your Deco

The intuitive Deco app guides you through an easy setup process that gets each unit up and running and all your devices connected and online. Follow the steps below to set up your Deco Whole Home Mesh Wi-Fi System.

1. Download and install the Deco app

Scan the QR code below or go to Google Play or the Apple App Store to download the Deco app. Install the app on your Android or iOS smartphone or tablet.



 
or



2. Log in or sign up with TP-Link ID

Open the app. Use your TP-Link ID to log in. If you don't have a TP-Link ID, sign up first.


Note: If you forgot your login password, tap [Forgot password?](#). The Deco app will guide you through the rest.

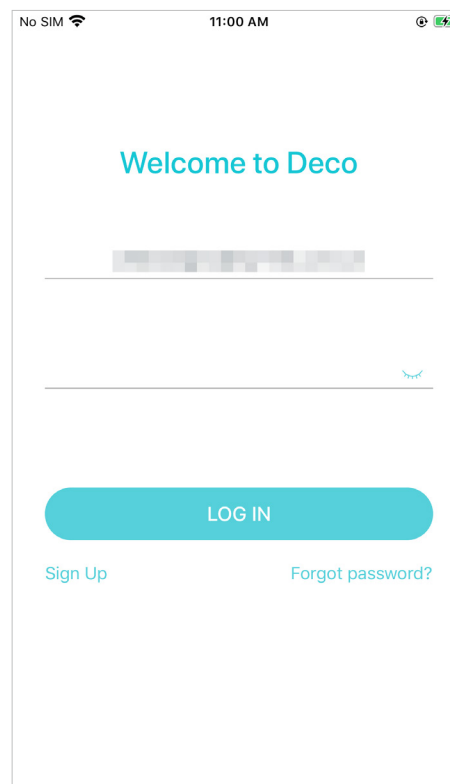

3. Connect Deco to your modem


Power off your modem. Connect your Deco to the modem and power them both on.

 If you don't have a modem, connect the Ethernet outlet directly to your Deco.

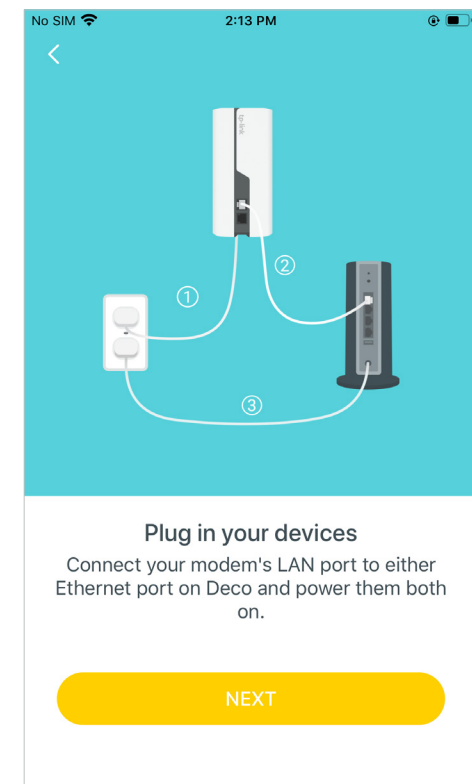


4. Select a location

 Select a location for this Deco. If its location is not listed, you can create a new one by choosing [Custom](#).

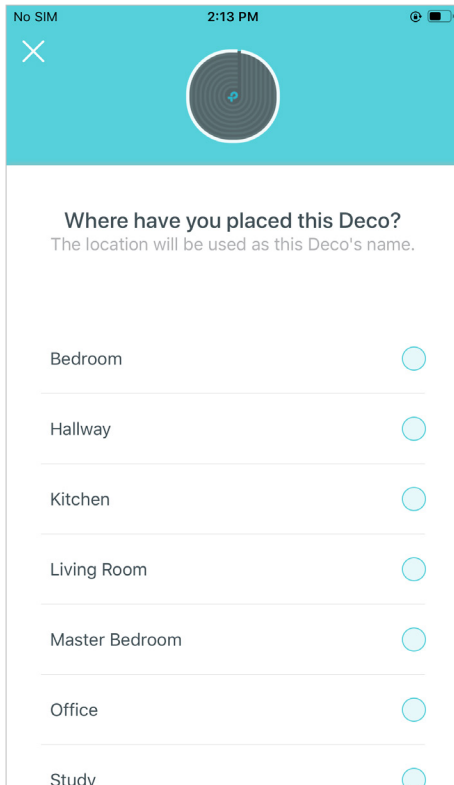


5. Set up internet connection

 Select the internet connection type and enter the information. If you are not sure, contact your internet service provider.

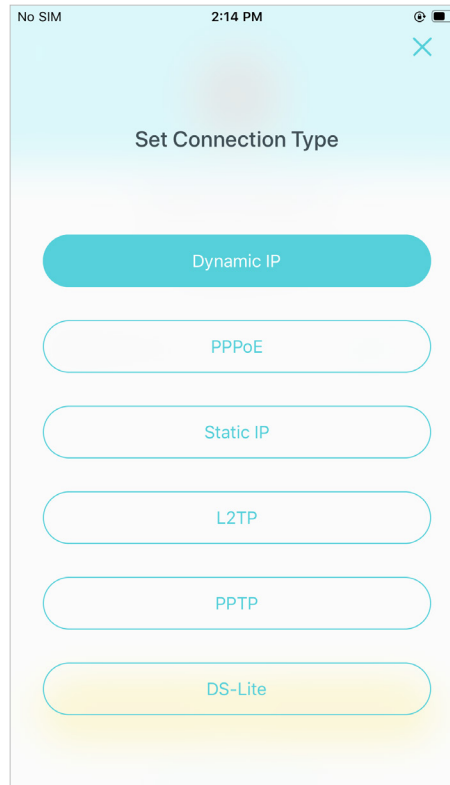


6. Create your Wi-Fi network

 Set a network name and a password. These will be the name and password you use to connect your devices to Wi-Fi.

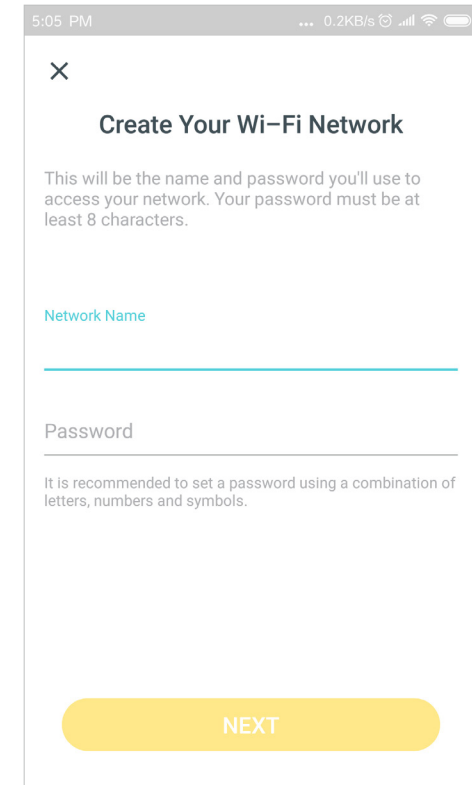

7. Connect to your Wi-Fi network

 Connect your devices to the Deco's Wi-Fi to continue the setup.

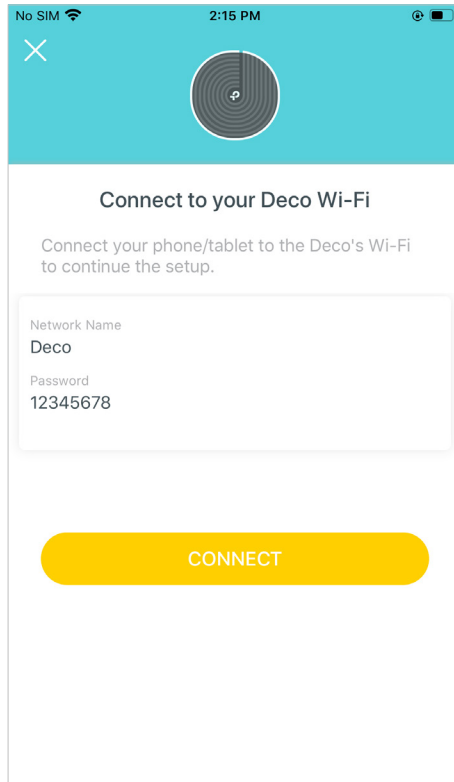

8. Setup complete

Your Deco network is now up. Connect all devices to the Deco network.

