

Mushroom Wireless Speaker

User Manual

Model No.: Mushroom [Wireless Speaker](#)



Introduction

Thank you for using our company's products , in order to enable you to operate the speaker as easy as possible. Please read this manual carefully before you begin to use it.

Product Specification:

Bluetooth version: 5.0

RMS: 5.0 W * 1

Impedance:: 4 Ω

Working distance: \geqslant 10M

Frequency response: 90HZ--20KHZ

Signal-to-noise ratio: \geqslant 60dB

Input sensitivity: 600 \pm 100m

Distortion: \leqslant 0.3%

Product Size: W140*D140 * H150 mm

Charge voltage: DC 5V

Battery : 600mah/3.7V

Playing time: 1.5-3.0 hours

How to use:

1.How to Operation

1. Keep the press slide roller to "ON" to power on the device, to use the following functions:
2. Note: Once finished using, Keep the press slide roller to "OFF" to turn off the device.

How to Pair bluetooth :

- 1.When the powered on , speaker makes a prompt voice, When indicator light flashes in blue, speaker is ready to pair with your device.
- 2.Please check phone searches for pairing name , device to connect. Once paired,the speaker makes a prompt voice.
- 3.From this moment, you can control the music from your mobile device, or from the receiver.(pls following the How to use the button)

2.How to use the Button

1. **Double-** press the slide roller to switch Bluetooth mode or AUX mode
- 2.Short press “ II/M»IM” to play or pause
- 3.Keep press the slide roller and release the control button-k to left or right to play next/previous song
- 4.Short press the slide roller and release the control button-k to left or right to volume + /volume - .

3. How to play the Audio Input (AUX mode):

Insert the micro USB cable into the micro USB port, and insert the 3.5mm jack into your mp3/mp4 player/mobile phone or other compatible device to play the music.

Note: When connecting the cable, the device does not change mode automatically. The press" II/M" to switch to AUX Mode.

4.How To Charge

- 1.Insert the Micro USB connection into the Micro USB port on your device and connect the other end of the cable to your PC or AC/DC adaptor to charge the speaker.

Note: At the end of charging, do not forget to disconnect the cable ,the charging time can not exceed 8 hours.

Warnings:

- *Do not hit or crush it seriously.
- *Do not contact benzene, diluent and other chemicals.
- * Do not use near by strong magnetic field or electric field.
- * Avoid direct rays or heating appliances.
- * Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
- * Do not listen at large volume for long periods of time, so as not to injure the hearing.
- *Do not clean the speaker with water and don't immerse the speaker in the water. This speaker isn't waterproof prevention function.
If use the speaker not by the right way and cause any quality problems, not support warranty. Kindly note above!. Please clean the speaker with a slightly damp cloth.
- * when using at low voltage, it may cause distortion of sound and please charge it in time.
- * Bluetooth is compatible with common smart phones and tablets, but depending on the device or application you use, may not be able to support a particular feature.

.Troubleshooting:

Fault	Solution
Unable to pair with other device	1. Check whether the speaker is still in the process of search or switch it off and on again. 2 There are too many Bluetooth devices in the proximity that cause difficulty in connection.Turn off other Bluetooth devices. 3. Make sure your device is in "Pairing Mode"
The sound is low or distorted.	4 Check the Bluetooth device volume and then adjust it to an appropriate level. 5. Recharge the battery.
Occasionally the music stops.	6. Check whether the speaker effective transmission range is exceeded or if there is an obstacle between the speaker and other Bluetooth devices.
Does not turn on or the light Does not up	7. The battery level is low, recharge the device. 8. Switch the speaker off and on again. 9. if 7.8 don't solution, please replace a new battery or led light (Note: Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.)

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

•Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.