

**Jouirbuds Pro**  
True wireless headphones



MJ141 quick guide

**Initial Pairing**


1. Open Case Lid to activate pairing mode.
2. To change pairing devices, press and hold button for 3 seconds and wait for LED light flash to enter pairing mode.



Button

**Bluetooth Menu**

Turn on the bluetooth of the device you wish to pair to, select "Jouirbuds Pro" and follow the on-screen instructions.

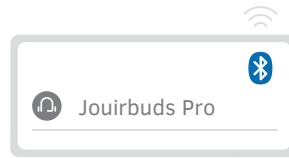

**Control**

(During phone call)  
Double tap the touch Area at earbuds to answer the call, double tap again to end the call

(When Listening the music)  
Double tap the touch Area at earbuds to cycle Play and Pause music.  
Triple tap the Right touch Area for next track.  
Triple tap the Left touch Area for previous track.  
If you only wear one ear that triple tap is only for next track



Touch Area

**Active Noise Cancellation**

(When wearing both earbuds)  
Press and hold 3 secs on right earbuds Touch Area to cycle ANC, Transparency and normal model.  
Press and hold 3 secs on left earbuds to active \*Voice Assistant.

(When wearing single earbuds)  
Press and hold 3 secs on each earbuds to active \*Voice Assistant.

\*It depends on your phone feature.



Touch Area

| Function                  | Operational Instructions   |
|---------------------------|--|
| Power On                  | Take earbuds out of the charging case  |
| Power Off                 | Put earbuds into the charging case and close the lid for 30s   |
| Earbuds Charging          | Put earbuds into the charging case and close the lid   |
| Pairing Mode              | Press the button on the charging case for 3 seconds  |
| Answer a call             | Double-tap on any earbuds  |
| Play Music                | Double-tap on any earbuds  |
| ANC                       | Press and hold 3 secs on right earbuds to cycle ANC modes.   |
| Next / Previous track     | Triple tap the Right touch Area for next track.<br>Triple tap the Left touch Area for previous track.<br>If you only wear one ear that triple tap is only for next track |
| *Active voice assistant   | Press and hold 3 secs on left earbuds to active voice assistant.   |
| Clear pairing information | Long press the charging case button for 10 seconds   |

\*Depends on phone's feature, please check your phone instruction.

**Charging the earbuds**

Put the earbuds into the charging case and close the lid, the charging case will automatically charge the earbuds.



**Charging the case**

Please use a USB-C charger to charge the case. The status LED will light up red while charging and change to green when charging is complete.



Bottom View

**FCC Warning**  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the Instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
- Reorient or relocate the receiving antenna.  
- Increase the separation between the equipment and receiver.  
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
- Consult the dealer or an experienced radio/TV technician for help.  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.  
FCC ID 2AYBH-MJ141

**Limited Warranty**

MOREJOY products are warranted against defects in materials and craftsmanship for a period of one year By default from the date of the original purchase. accordance with MOREJOY's user manuals. Under this warranty, your claim can be made through place of original purchase.  
During the warranty product, MOREJOY will, at its sole option, repair or replace the original defective parts or issue a refund in the amount of the original purchase price. This warranty does not include damage resulting from accidents, or from improper use, maintenance, or repair, or from causes that are not defects in materials or craftsmanship.  
The warranty term differs from one region to another. If you would like to verify the warranty term of the product bought, please kindly contact: info@morejoyinno.com

The information provided on this document is for information only. MOREJOY seeks to provide accurate and timely information; nevertheless, there may be inadvertent technical or factual inaccuracies and typographical errors, for which we apologize. We reserve the right to make changes and corrections at any time, without notice.

For full warranty details please visit [www.morejoyinno.com](http://www.morejoyinno.com)